

Zakład Mechaniki i Elektroniki ZAMEL sp.j.

J.W. Dzida, K. Łodzińska

ul. Zielona 27, 43-200 Pszczyna, Poland Tel. +48 (32) 210 46 65, Fax +48 (32) 210 80 04 www.zamel.pl, **e-mail**: marketing@zamel.pl



DESCRIPTION

The LDM-30 device is used for graphic presentation of the three-phase voltage supply system level. Voltage value is shown by means of a three diode line consisting of 11 LED diodes. The display range is from 195 to 245 V ~ for every phase. The device's system is powered from L1 phase, and its lack causes total device switch off.

FEATURES

- Graphic presentation of the threephase voltage supply system level,
- voltage value proportional to graph height scale range 5 V,
- indication stability,
- indicated voltage value accuracy ±2,5 V,
- voltage critical values are signalled by diodes marked "≤195 V", .≥245 V".
- ے TH-35 DIN rail installation.

TECHNICAL PARAMETERS

LDM - 30

Input (supply) terminals: L1, N
Input rated voltage: 230 V~

Input voltage tolerance: from -15 to +10 %

Rated frequency: 50 / 60 Hz
Rated power consumption: 68 mA

Measure terminals: L1, L2, L3

Voltage indicator: 3x11 LED diodes

Voltage indicator accuracy: ±2,5 V

Number of terminal clamps: 4
Section of connecting cables: from 0,2 to 2,5 mm²
Ambient temperature range: from -20 to +45 °C

Operating position: free

Mounting: TH35 rail (PN-EN 60715)

Protection degree: IP20 (PN-EN 60529)

Protection class: II

Overvoltage category: II

Pollution degree: 2

Impulse voltage: 1 kV (PN-EN 61000-4-5)

Dimensions (height / width / depth): doublemodular (35 mm) 90x35x66 mm

Weight: 105 g

Reference standards: PN-EN 60947-5-1, PN-EN 60947-1 PN-EN 61000-4-2,3,4,5,6,11


|-----



The device is designed for three-phase installation and must be installed in accordance with standards valid in a particular country. The device sho-

uld be connected according to the details included in this operating manual. Installation, connection and control should be carried out by a qualified electrician staff, who act in accordance with the service manual and the device functions. Disassembling of the device is equal with a loss of guarantee and can cause electric shock. Before installation make sure the connection cables are not under voltage. The cruciform head screwdriver 3.5 mm should be used to instal the device. Improper transport, storage, and use of the device influence its wrong functioning. It is not advisable to instal the device in the following cases: if any device part is missing or the device is damaged or deformed. In case of improper functioning of the device contact the producer.


APPEARANCE

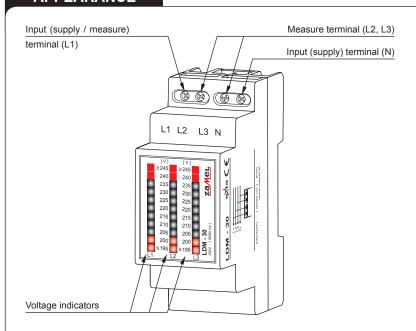


MOUNTING. FUNCTIONING


- Disconnect the power supply from the mains by the phase fuse, the circuit-breaker or the switch-disconnector that are joined to the proper circuit,
- Check if there is no voltage on connection cables by means of a special measure equipment,
- 3. Install LDM-30 device in the switchboard on TH-35 DIN rail,
- 4. Connect the cables with the terminals according to installing diagram,
- Switch on the power supply from the mains

The proper functioning of the device is shown by lighting of the LED diode line. Then its height is proportional to voltage value in the measured phase. If the voltage is higher or equal with 245 V − all diodes are switched on. When the voltage is lower or equal with 195 V only "≤195 V" diode is switched on. It is on till the input voltage value drops below 50 V~.

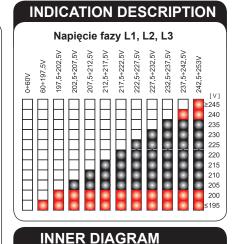




DIMENSIONS

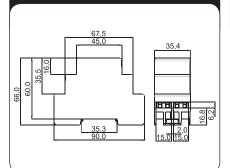


PRODUCT FAMILY

LDM-30 Voltage indicator belongs to LDM voltage indicators family.

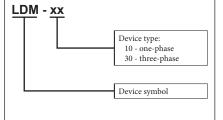

EXAMPLE OF INSTALLATION

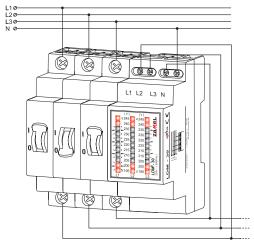

TYPICAL USE:

The LDM-30 three-phase voltage indicator connected to circuit—breaker or switch-disconnector output indicates voltage value of a particular phase.

In the system diode LED lines signal:

- د line L1, L3 voltage presence on phase wires L1 and L3,
- د line L2 switched off no voltage on phase wire L2.

The number of switched on diodes in a line directly indicates the voltage level. Its value can be read from the scale which is next to the diode LED lines. Connecting L1 and N terminals the system can be used in a one-phase installation.

GUARANTEE CARD

There is 24 months guarantee on the product

- ZAMEL provides a two-year warranty for its products.
- ZAMEL provides a two-year warranty
 The ZAMEL warranty does not cover:
 - a) mechanical defects resulting from transport, loading / unloading or other circumstances,
 - b) defects resulting from incorrect installation or operation of ZAMEL products,
 - c) defects resulting from any changes made by CUSTOMERS or third parties, to products sold or equipment necessary for the correct operation of products sold,
 - d) defects resulting from force majeure or other aleatory events for which ZAMEL is not liable.
- All complaints in relation to the warranty must be provided by the CUSTOMER in writing to the retailer after discovering a defect.
- ZAMEL will review complaints in accordance with existing regulations.
- Salesman stamp and signature, date of sale_
- 5. The way a complaint is settled, e.g. replacement of the product, repair or refund, is left to the discretion of ZAMEL