




PA120 MICRO TWEEZERS

PA120/MICRO TWEEZERS



INSTALLATION

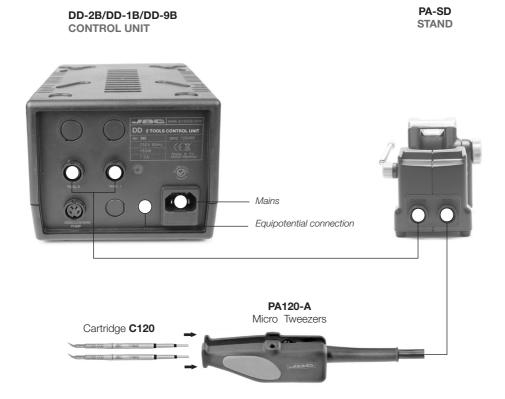



Connectable control units: \mathbf{DI} , \mathbf{DD} and \mathbf{RM}

Connectable compact line: CP



CHANGING THE CARTRIDGE

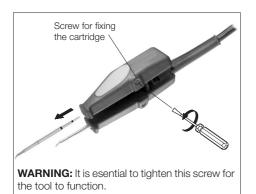

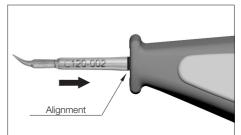


Important: It is esential to insert the cartridge till the end for a good connection.


Take the mark ▶ as reference and check that

Take the mark **a** as reference and check the both tips of the tweezer coincide.

CARTRIDGE RANGE

PA120-A has an individual temperature control for each cartridge so it is supplied individually.

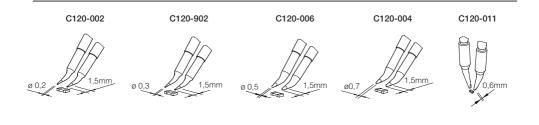



Consult our wide range of cartridges with more than 300 references in **www.jbctools.com.** For special cartridges contact with our distributor.

TECHNICAL SPECIFICATIONS	
 Effective power per cartridge fitted: 20W Weight without cartridge: 102 gr. aprox ESD Safe 	
This product should not be thrown in the garbage.	
WARRANTY JBC's 2 years warranty guarantees this equipment against all manu-	
facturing defects, covering the replacement of defective parts and all necessary labour.	
Warranty does not cover product wear due to use or mis-use. In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased enclosing this fully filled in, sheet.	
SERIAL N°	
STAMP OF DEALER	
DATE OF PURCHASE	